

of Description of the Several Views of the Dra


The face of the watch has a 6
line display with up to 20
characters per line

Inside:

Small speaker. — 21

Vibration device. — 23

Battery. — 25

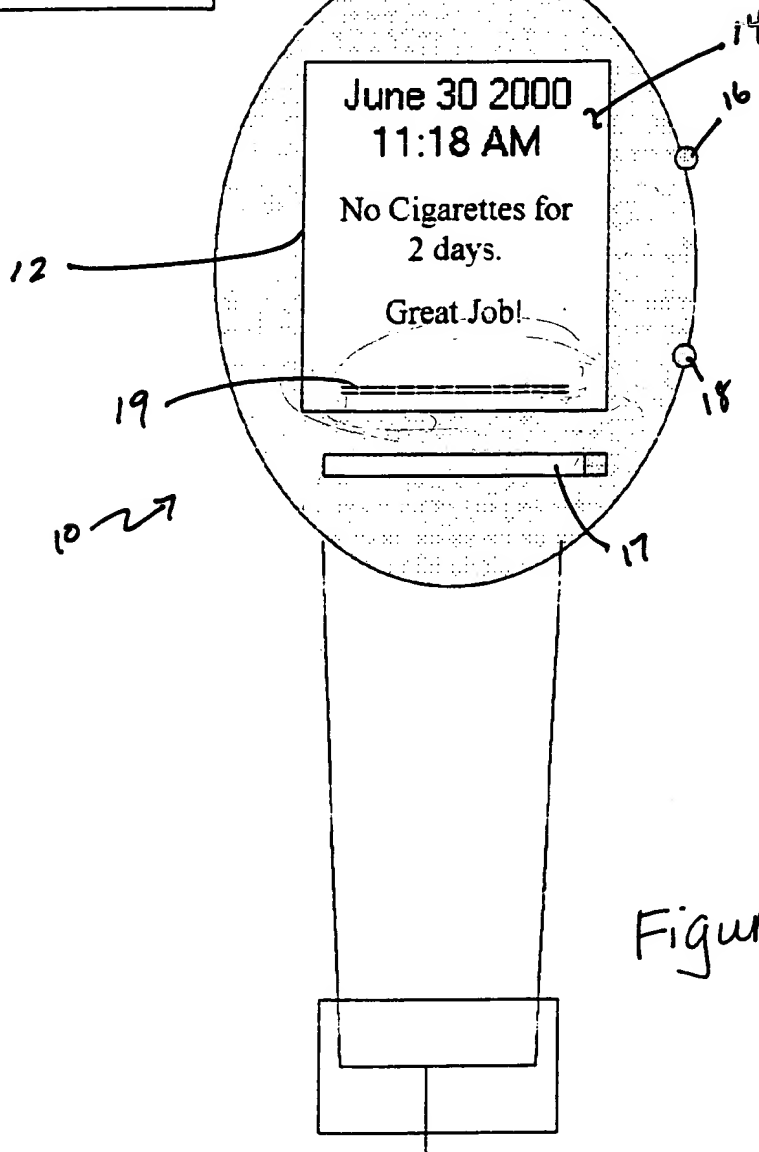

Button A - used to set timer,
reset chronograph and to set
functions

Button B - used to exit timer
and chronograph and set
functions

Rate monitor

Button C - "Cigarette Button"
Used to record cigarette use
and start/stop button for timer
and chronograph

Figure 1

09788134-001601

Smoking Time Watch Flowchart, Main Loop

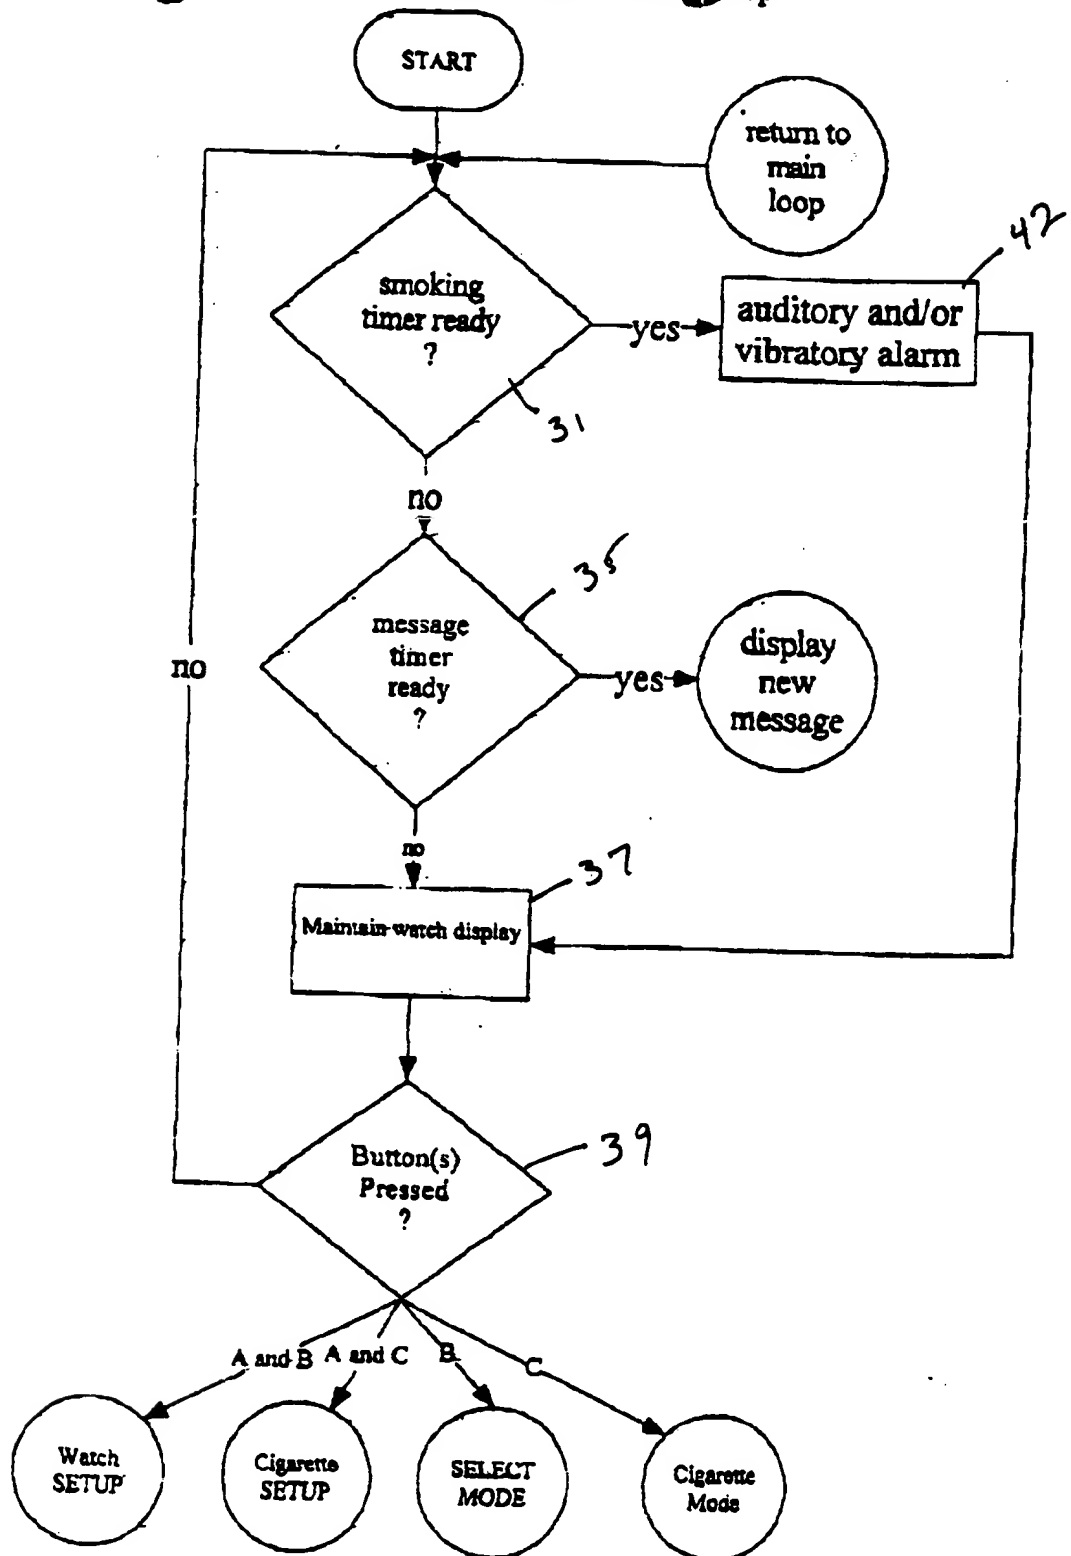


Figure 2

Figure 3


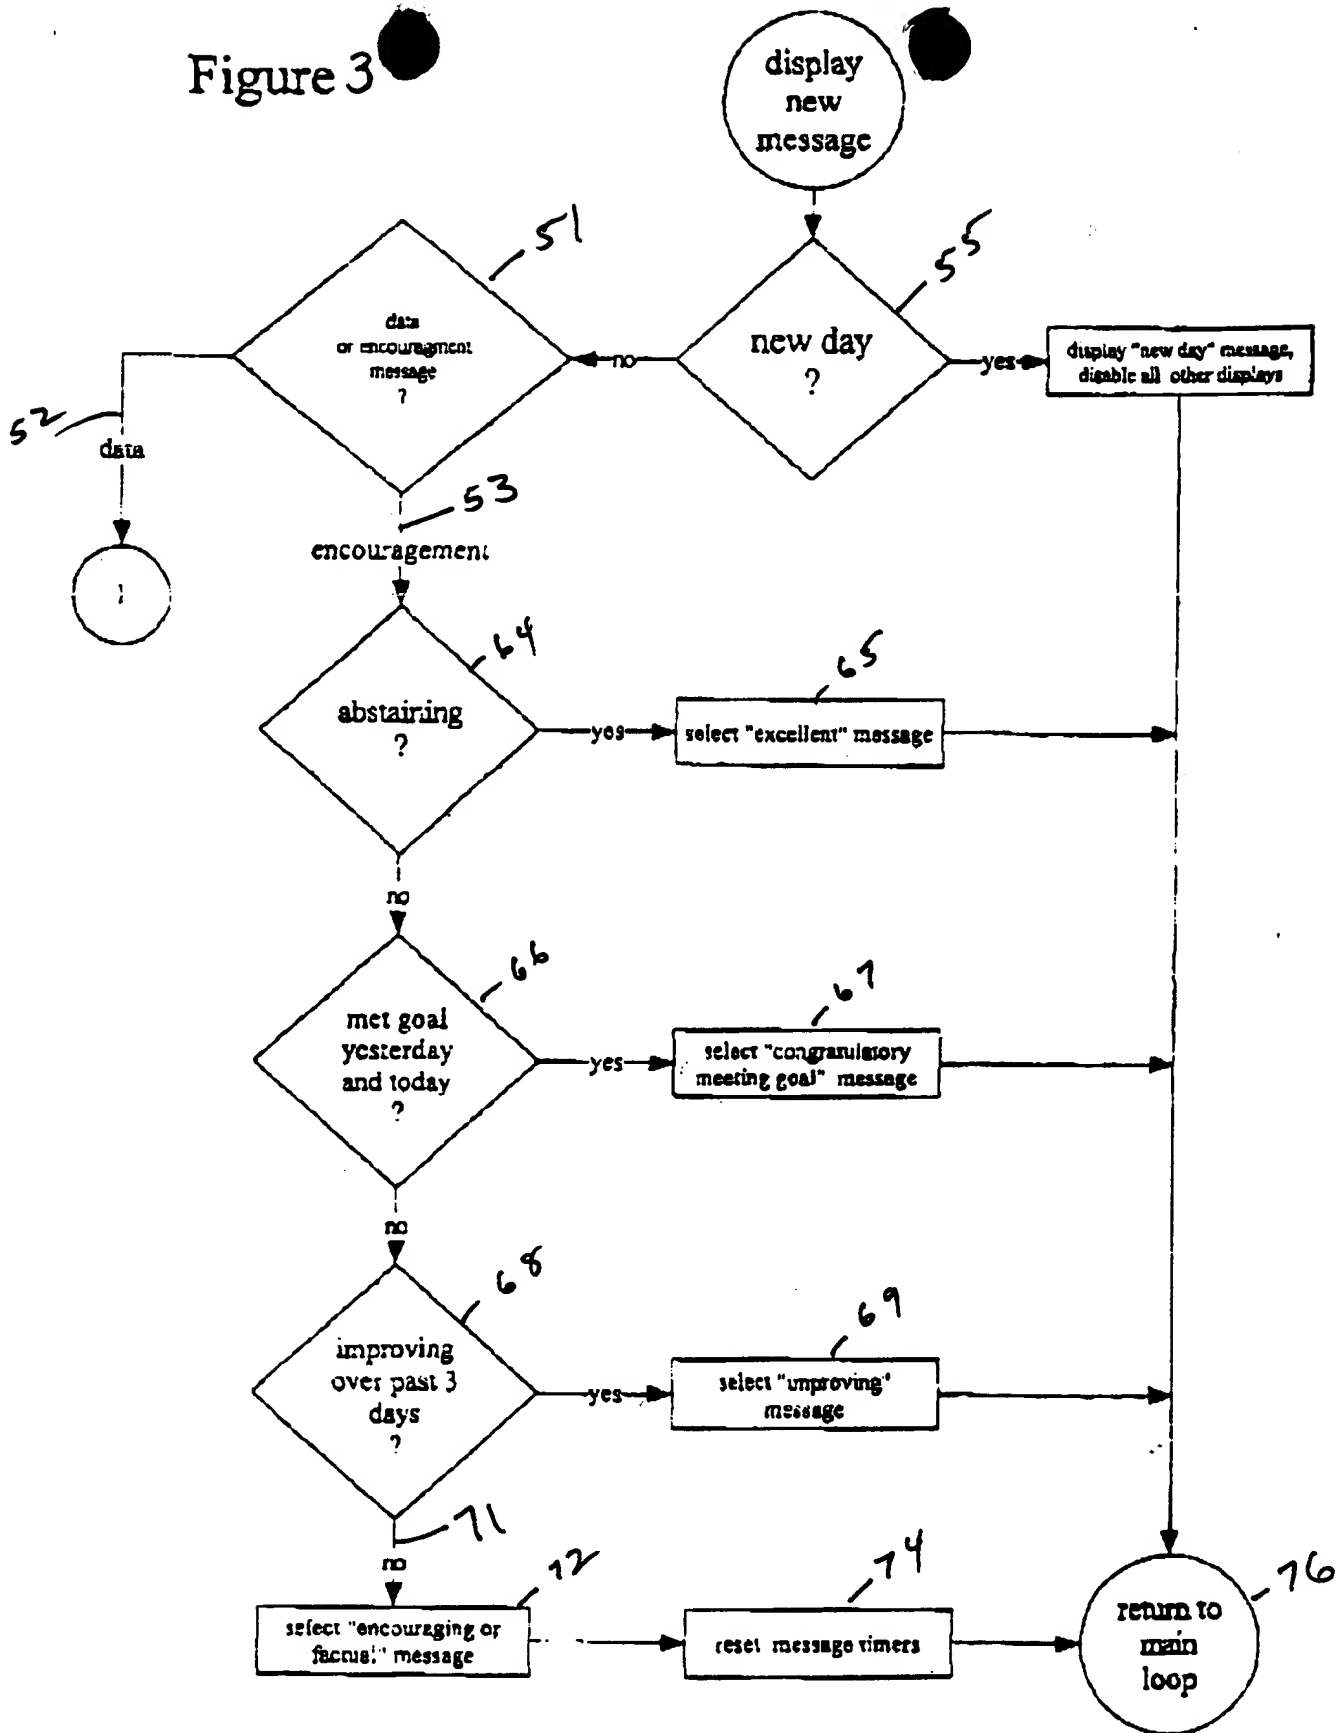


Figure 3 continued

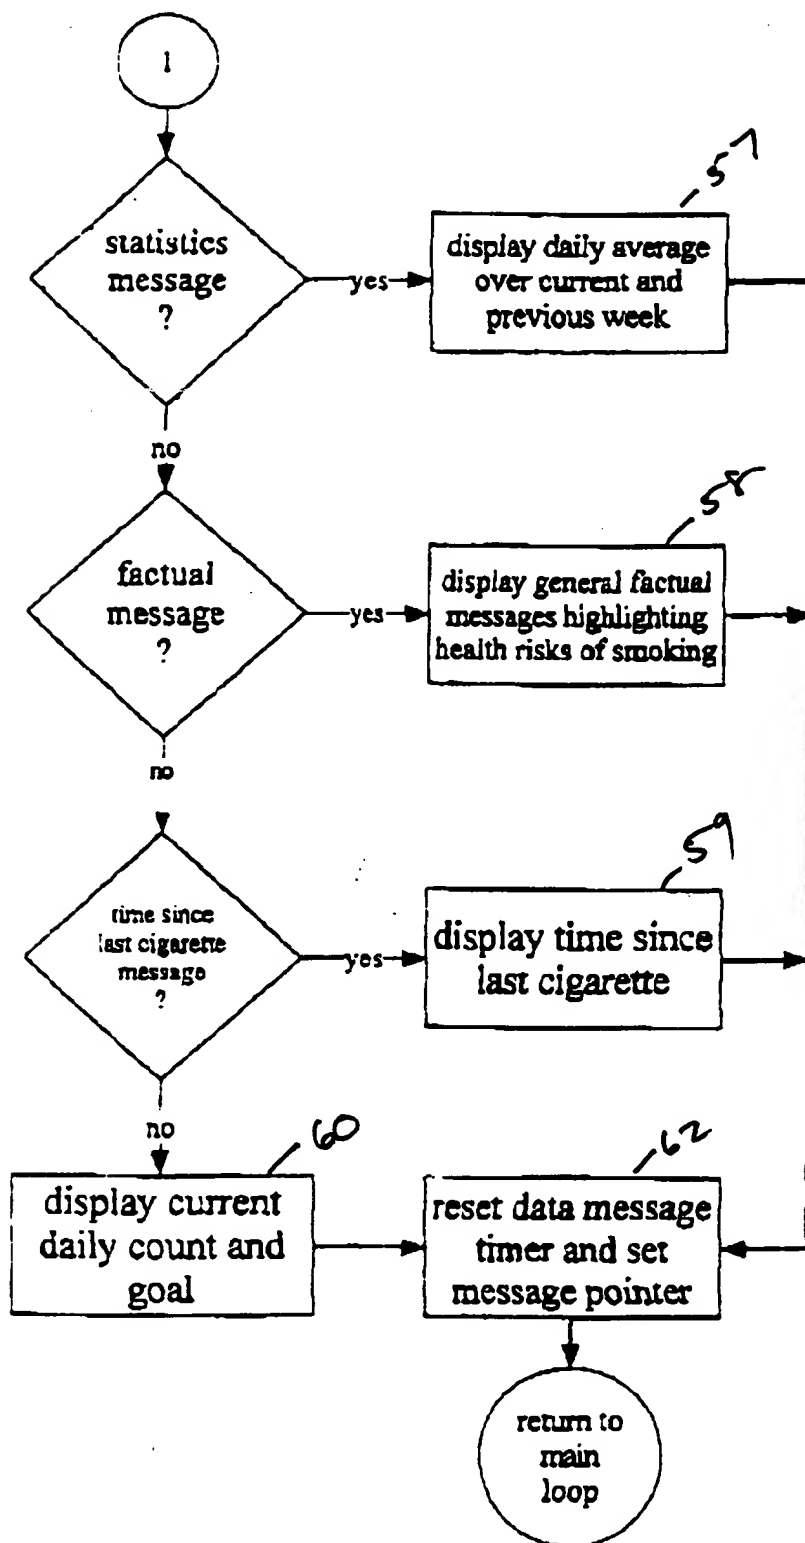

09783134.024601

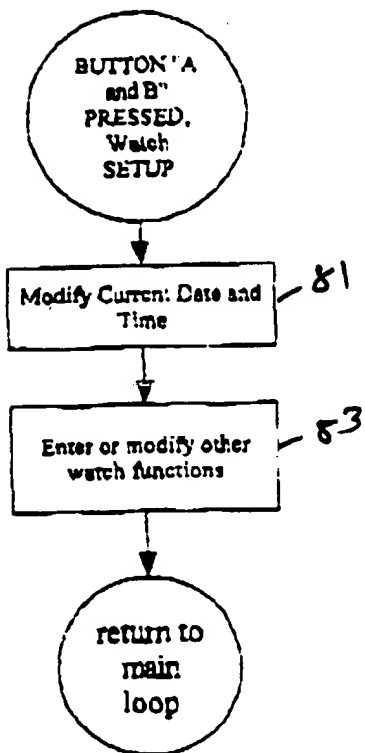


Figure 4

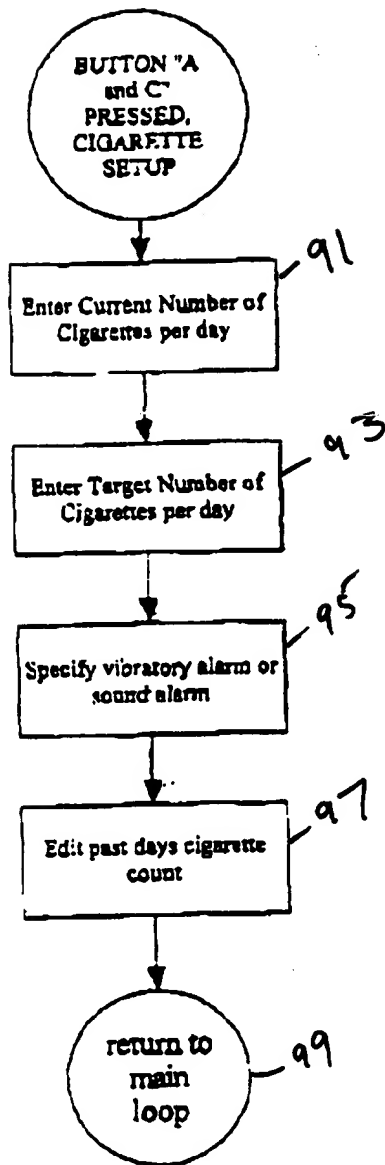


Figure 5

Figure 6

09768134-021601

